



CASEMENT WINDOWS

MAINTENANCE

To attain optimum performance, the hinges will require periodical maintenance and lubrication. The hinges, pivots, sliding shoe and tracks should be kept free from dirt, debris and obstruction at all times.

Pivot points

At the time of installation all pivot points should be lubricated with light machine oil, taking care to wipe away excess.

Hinges

Annually, clean away dirt from hinges and apply lubrication as above.

Security fixings

Check the tightness and security of all fixing screws.

Handles

Clean and lightly oil external-moving parts annually. eg WD40

Cleaning frames

To remove atmospheric grime, clean regularly with soap and water. Check drain holes are free from obstruction. If blocked, remove obstruction and wash thoroughly.

Locking system

Keep sliding mechanisms free from dirt and lubricate annually. To achieve optimum weathering performance, adjust the locking cams by using a 4mm allen key if required.

Mastic seal

Check for any signs of cracking – if found remove and replace with new.

We recommend Silversil silicone sealants, available from Eurocell branches nationwide.

OPERATING INSTRUCTIONS

To unlock the handle (key locking)

Insert and rotate the key through 90°, within the lock cylinder. The handle will now be unlocked.

To open the window

Depress and hold the button, rotate the handle through 90° and push the window outwards.

To close the window

Pull the window to its fully closed position and turn the handle back through 90°.

To lock the handle (key locking)

Turn the key through 90°, within the cylinder and remove the key.

