

TILT & TURN WINDOWS

MAINTENANCE

Maintenance and lubrication

To attain optimum performance, hinges and loading points should be kept free from dirt and will require annual lubrication.

Handles

Clean and lightly oil external-moving parts annually.

Cleaning frames

To remove atmospheric grime, clean regularly with soap and water. Check drain holes are free from obstruction. If blocked, remove

obstruction and wash thoroughly to ensure correct drainage.

Mastic seal

Check for any signs of cracking, if found remove and replace with new.

Adjustment

The casement can be adjusted vertically at the bottom hinge and horizontally at the top hinge. To achieve optimum weathering performance, adjust the locking cams by using a 4mm allen key if required.

OPERATING INSTRUCTIONS

To tilt

From closed position, insert key into cylinder and rotate to unlock. Rotate handle 90° until horizontal, window will now tilt.

To turn

From tilt position close window. Rotate handle 90° until pointing vertically upwards, window will now turn.

To lock

From turn position close window. Rotate handle 180° until pointing vertically down and rotate key to lock window.

