

TILT & SLIDE PATIO DOORS

MAINTENANCE

Runner arms and stay arms

With the door in slide mode, lubricate the moving parts of the bottom runner arms and top stay arms with light machine oil. Ensure mechanism is free from dirt and debris.

Locking mechanism

Lightly oil locking cam slots.

Bottom track

Do not lubricate. Ensure that the track is clear of dirt and debris.

Handles

Clean and lightly oil external moving parts.

Lock cylinder

Do not lubricate (packed with special grease).

OPERATING INSTRUCTIONS

To unlock

Operating begins in the closed position (handle vertically upwards). Insert the key and rotate to unlock. Pull handle downward 90° into horizontal position. The door will now tilt inwards. To lock in tilted position, rotate the key.

To turn

To switch from tilt mode to slide mode, rotate the key to unlock. Move handle downward 90° to vertically downward. The door will now slide along the track from side to side.

To lock

To close door from slide mode, slide the door to closed position, the bottom of the door will move towards the doorway. Rotate handle 180° to vertically upward, the door will now close into the doorway. Rotate the key to lock.

